




1. Use hex bolts to attach front drawbar under the 3 pt frame. Need only 6" max long chains with drawbar.
2. To attach multiple harrow sections width wise, there are S-hooks on one side of the sections, just engage sections and crimp s-hooks with the hammer.
3. On the back end there are pieces of PASSING LINK chains, loop each chain through end link around body of the chain harrow (not hooks on the rear end) and bolt to the long angle iron on the rear end.

# Chain Harrow – Assembly Instructions

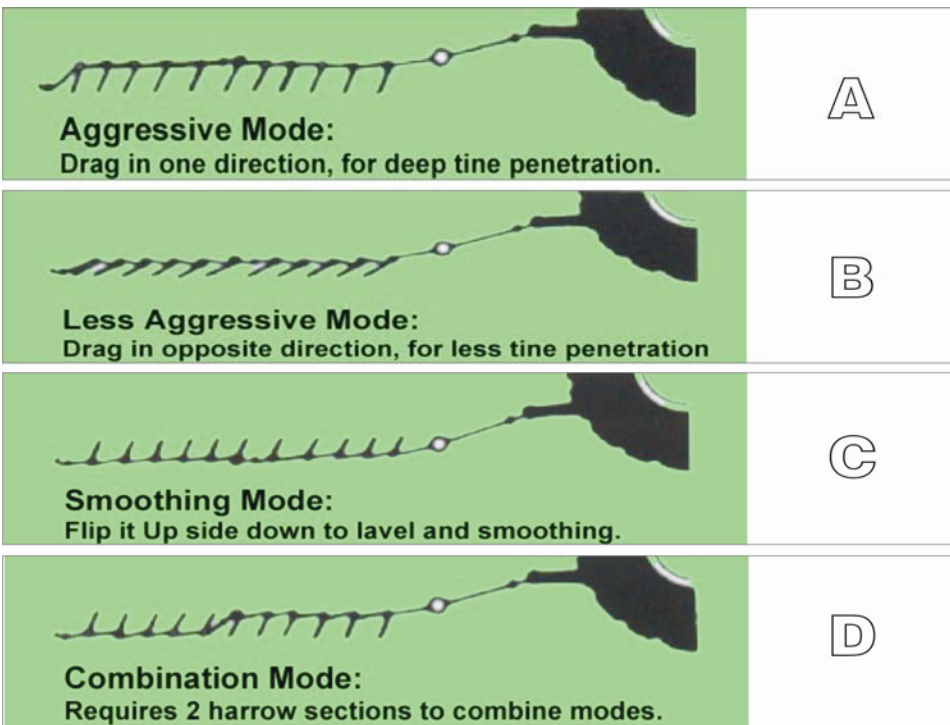

1. Lay Down All sections Of Chain Harrow Wide Open With Tines Touching The Ground As Shown In The Picture **A**.

## 2. Length Wise Setting

There are Drawbar Pull Hooks on front and Back end of the harrow sections.

Take two sections of same width and engage with each other as per above modes **A, B, C or D**

## 3. Width Wise Setting

There are S-Hooks on one side of each Section to engage multiple chain harrow sections width wise.

Bring each set of sections as per step 2 parallel to each other and check width wise all sections next to each other are on the same mode.

Width wise engage S-Hooks of one section to the next section. These can be more than two sections. e.g. In 18 ft. wide Chain Harrow width wise there are three 6ft. wide sections 6+6+6

4. Now Chain Harrow sections are ready to pull either side. Engage drawbar with Pull Hooks and hitch behind your tractor and go.